


Generic "A" models have been made to be able to fit in several brands, some brands could have similar if not identical distances between the platters, due to these differences the user must be careful while introducing the headcombs in the headstack and taking the heads out of the ramp or introducing them again.


The following pictures will describe the procedure to follow to prevent any damage to the headstack:

First lets define the start of the ramp as the part of the ramp near the platters, and the end of the ramp as the side where we slide the heads to in order to remove them.

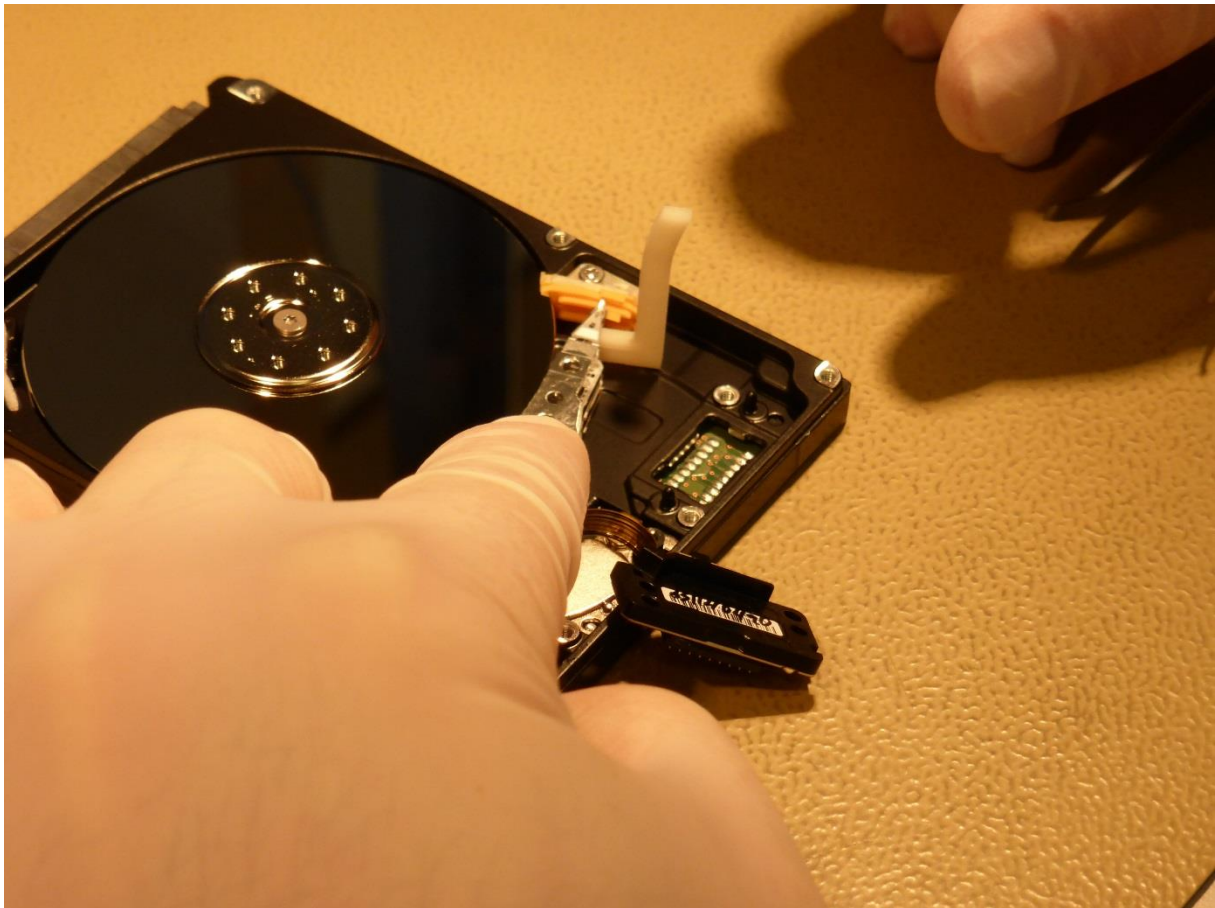

Carefully insert the headcombs sliding them between the heads, the tips of the headcombs are wider to prevent them from falling off, so you should feel a bit of resistance.

Sometimes it is necessary to move the heads a little to the end but still on the ramp to be able to introduce the headcombs.

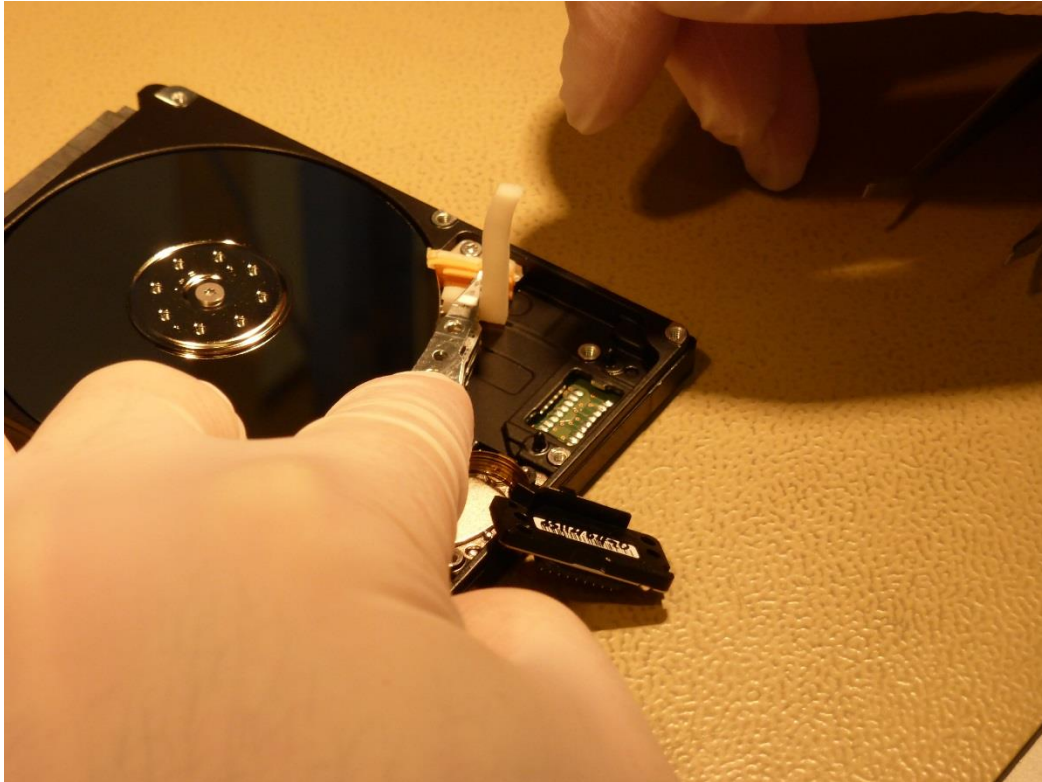

Insert them as further as possible like described



Be Careful while inserting them back again onto the ramp, watch carefully that they fit properly into each ramp slide.

Sometimes the headcombs have to be taken out when they are on the end of the ramp, before we are able to slide the heads to the middle of the ramp.



After removing the headcombs, move the heads from the end of the ramp until this position  
So you can confirm that they are into the proper slide/position.